 
 
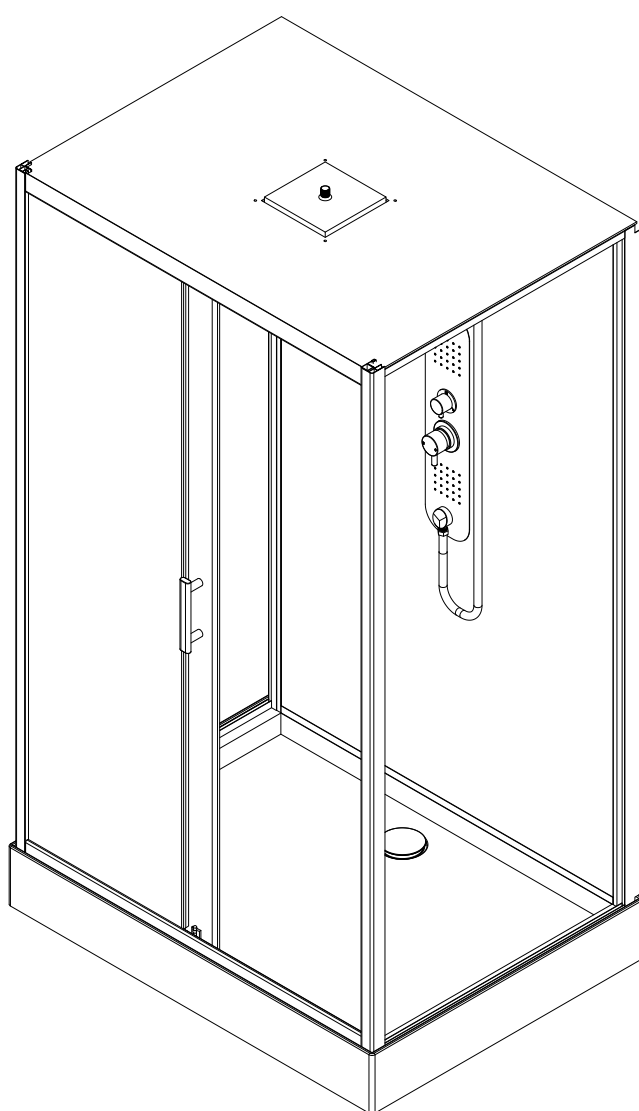 
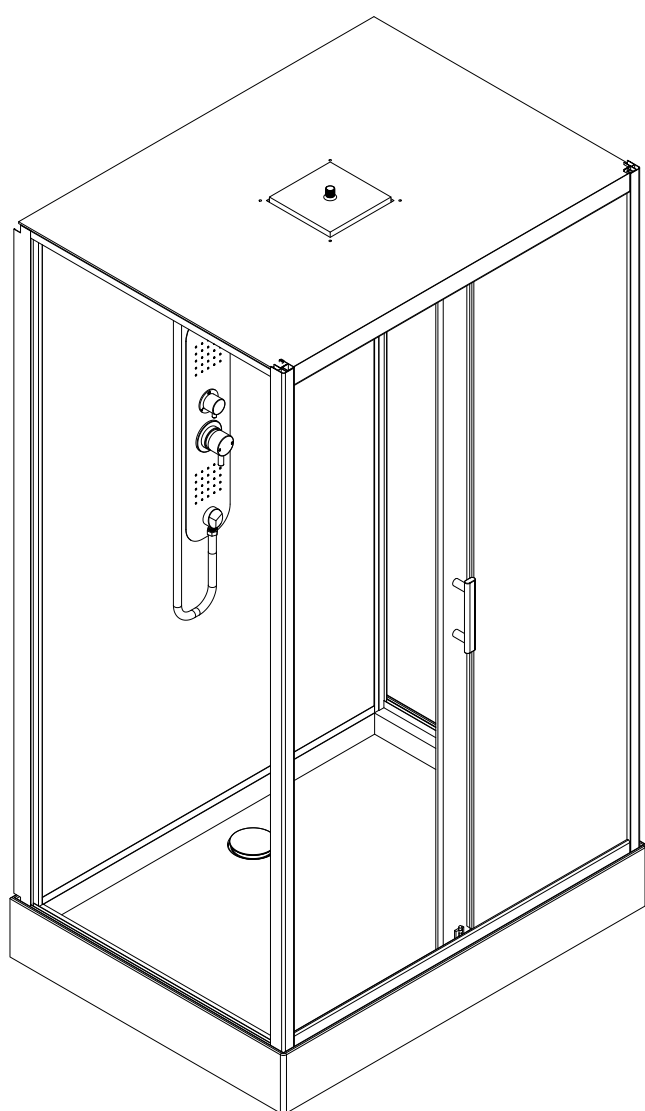 
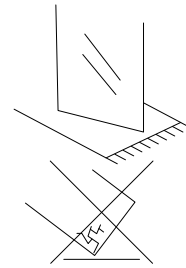 
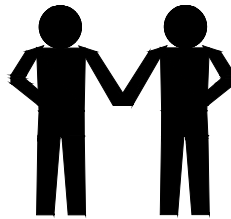 
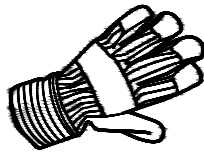 
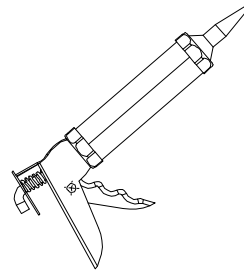 
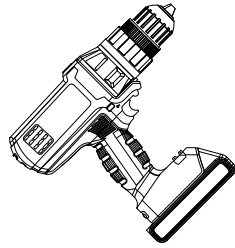 
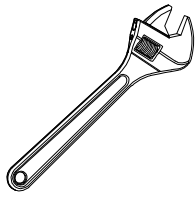 
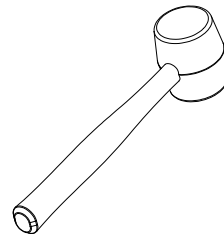 


ITEM NO:HTVE-606-8012

ITEM NO:HTVE-606-9012

User Manual

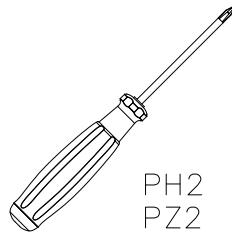

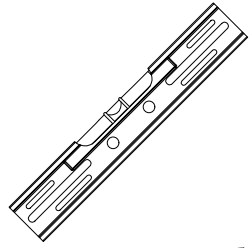

TROUBLESHOOTING

Problem	Action
Leakage	Check the watertightness between the base and the glass walls.
	Check the watertightness between the base and the rails.
	Check the watertightness between the rails and the glass walls.
Walls do not fit properly to the base	Check with a spirit level that the base is horizontal.
	Check with a spirit level that the walls are vertical.
Doors make a noise and/or do not open and close smoothly	Check with a spirit level that the shower cabinet is fastened vertically to the wall.
	Check door wheels and their lubrication.

MAINTENANCE

CLEANING

- Clean regularly with a mixture of equal parts of water and vinegar. Allow 5 minutes for it to act, and then rinse with water
- Do not use strong or abrasive detergents or solvents, this could damage the product.
 - Follow the manufacturer's instructions when using detergents. Do not use steel wool/Scotchbrite, abrasive detergents or sharp implements.
- Use bactericidal detergent on a regular basis.
- Leave the doors open after using the shower to reduce the risk of mildew.
- Rinse off residual soap etc. from the walls after use.

MAINTENANCE

- Lubricate the doors if they make a noise, or do not open and close smoothly.
- Check that all parts are correctly fitted and sealed before using the shower.
- Check that the walls are vertical and correctly fitted to each other before use.

FEILSØKING

Problem	Tiltak
Lekkasje	Kontroller vanntettheten mellom bunnen og glassvegger.
	Kontroller vanntettheten mellom bunnen og skinner.
	Kontroller vanntettheten mellom skinner og glassvegger.
Vegger ikke rettet inn mot bunnen	Kontroller med vaterpass at bunnen er horisontal.
	Kontroller med vaterpass at veggene er vertikale.
Dørene støyer og/eller beveger seg ujevnt	Kontroller med vaterpass at dusjkabinettet er vertikalt festet mot vegg.
	Kontroller hjulene på dørene og om de er smurt.

 
VEDLIKEHOLD

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
RENGJØRING





- Rengjør regelmessig med en blanding av like deler vann og eddik. La virke i 5 minutter og skyll med vann
- Ikke bruk sterke eller slipende rengjøringsmidler eller løsemidler, det kan skade produktet.
 - Følg produsentens anvisninger ved bruk av rengjøringsmiddel. Ikke bruk stålull/scotchbrite, slipende rengjøringsmidler eller skarpe gjenstander.
- Bruk regelmessig bakteriedrepende rengjøringsmiddel.
- La dørene stå åpne etter at dusjen er brukt, for å redusere faren for at det danner seg mugg.
- Skyll bort såperester og lignende fra veggene etter hver gangs bruk.

VEDLIKEHOLD



- Smør hvis dørene støyer og/eller beveger seg ujevnt.
- Kontroller at alle deler er riktig montert og tettet før du bruker vann.
- Kontroller før bruk at veggene er vertikale og korrekt tilpasset mot hverandre.

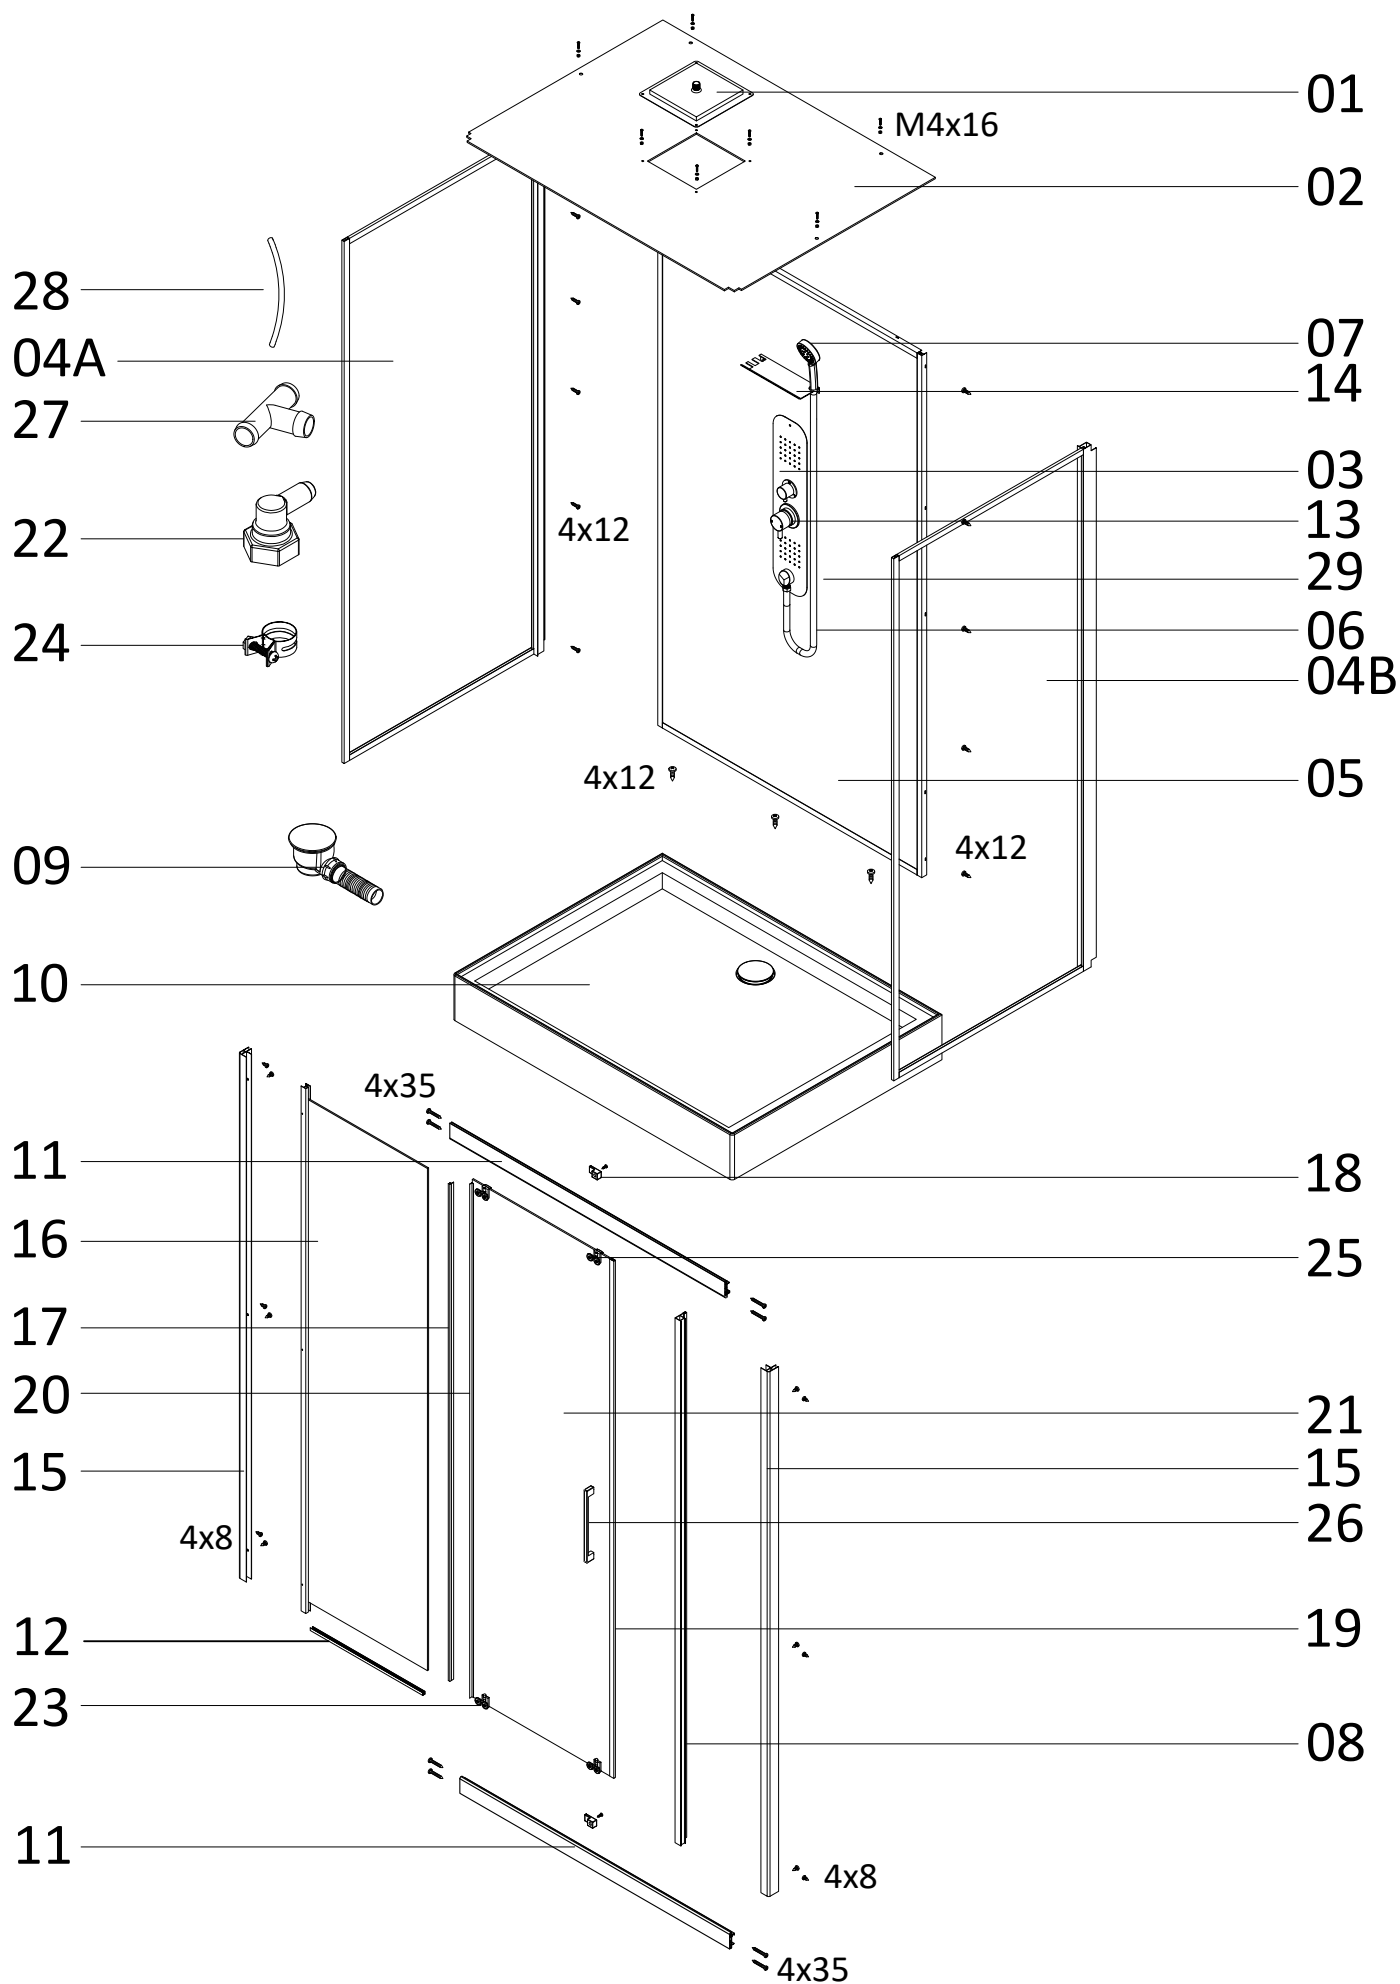

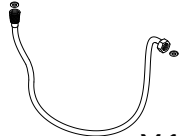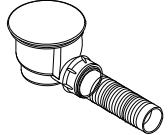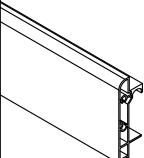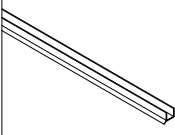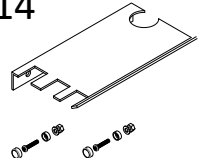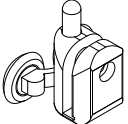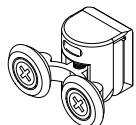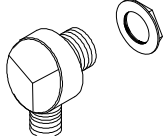
01  X1	02  X1	03  X1	04A  X1	04B  X1
05  X1	06  X1	07  X1	08  X1	09  X1
10  X1	11  X2	12  X1	13  X1	14  X1
15  X2	16  X1	17  short X1	18  X2	19  X1
20  long X1	21  X1	22  X4	23  X2	24  X10
25  X2	26  X1	27  X1	28  X1	29  X1
30  ST4x12 X13	31  ST4x35 X8	32  ST4x8 X12	33  M4x16 X8	

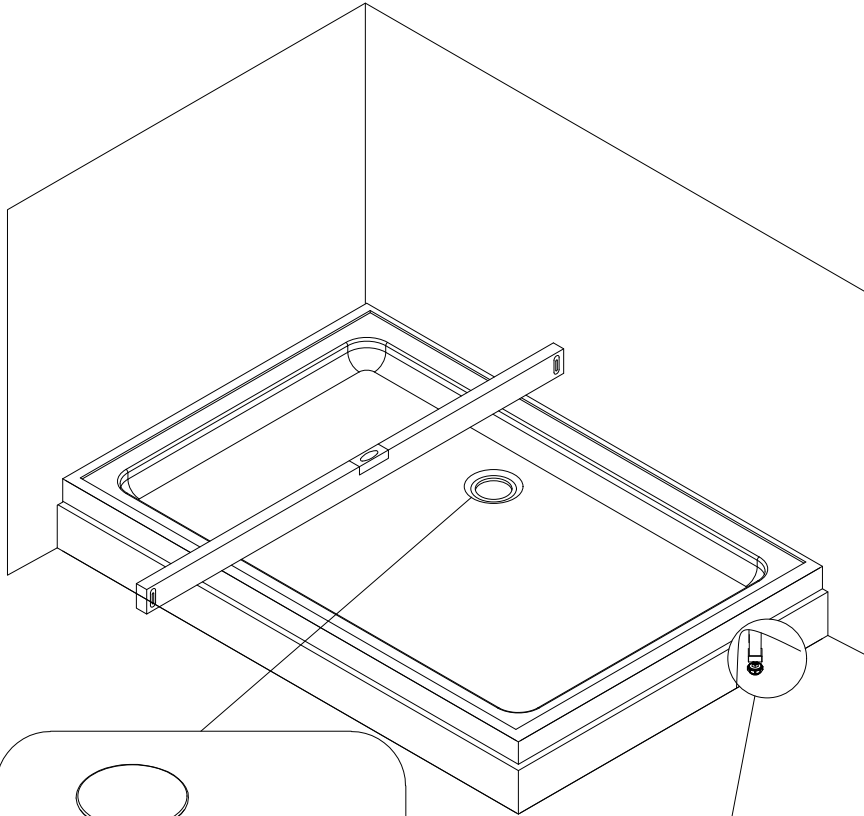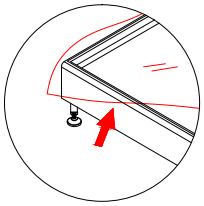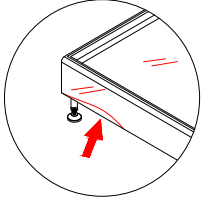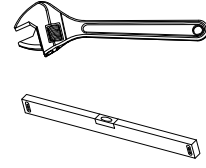    



09

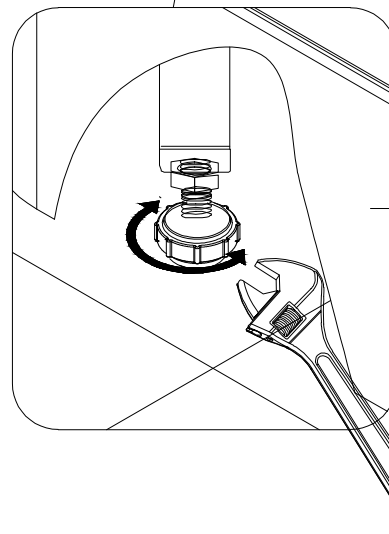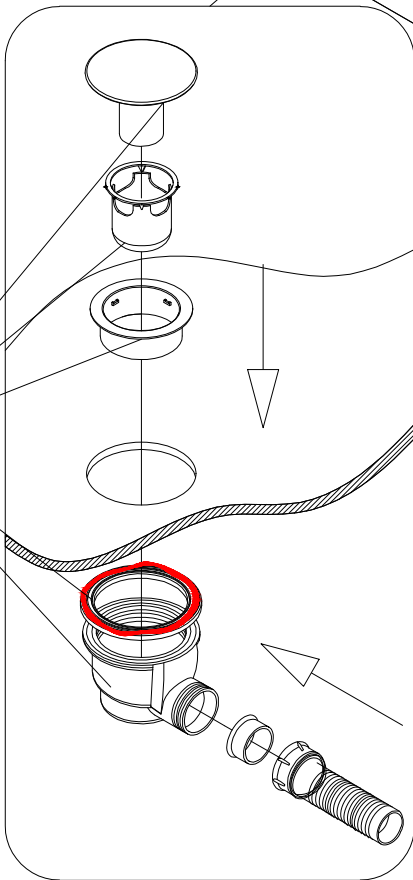  


10

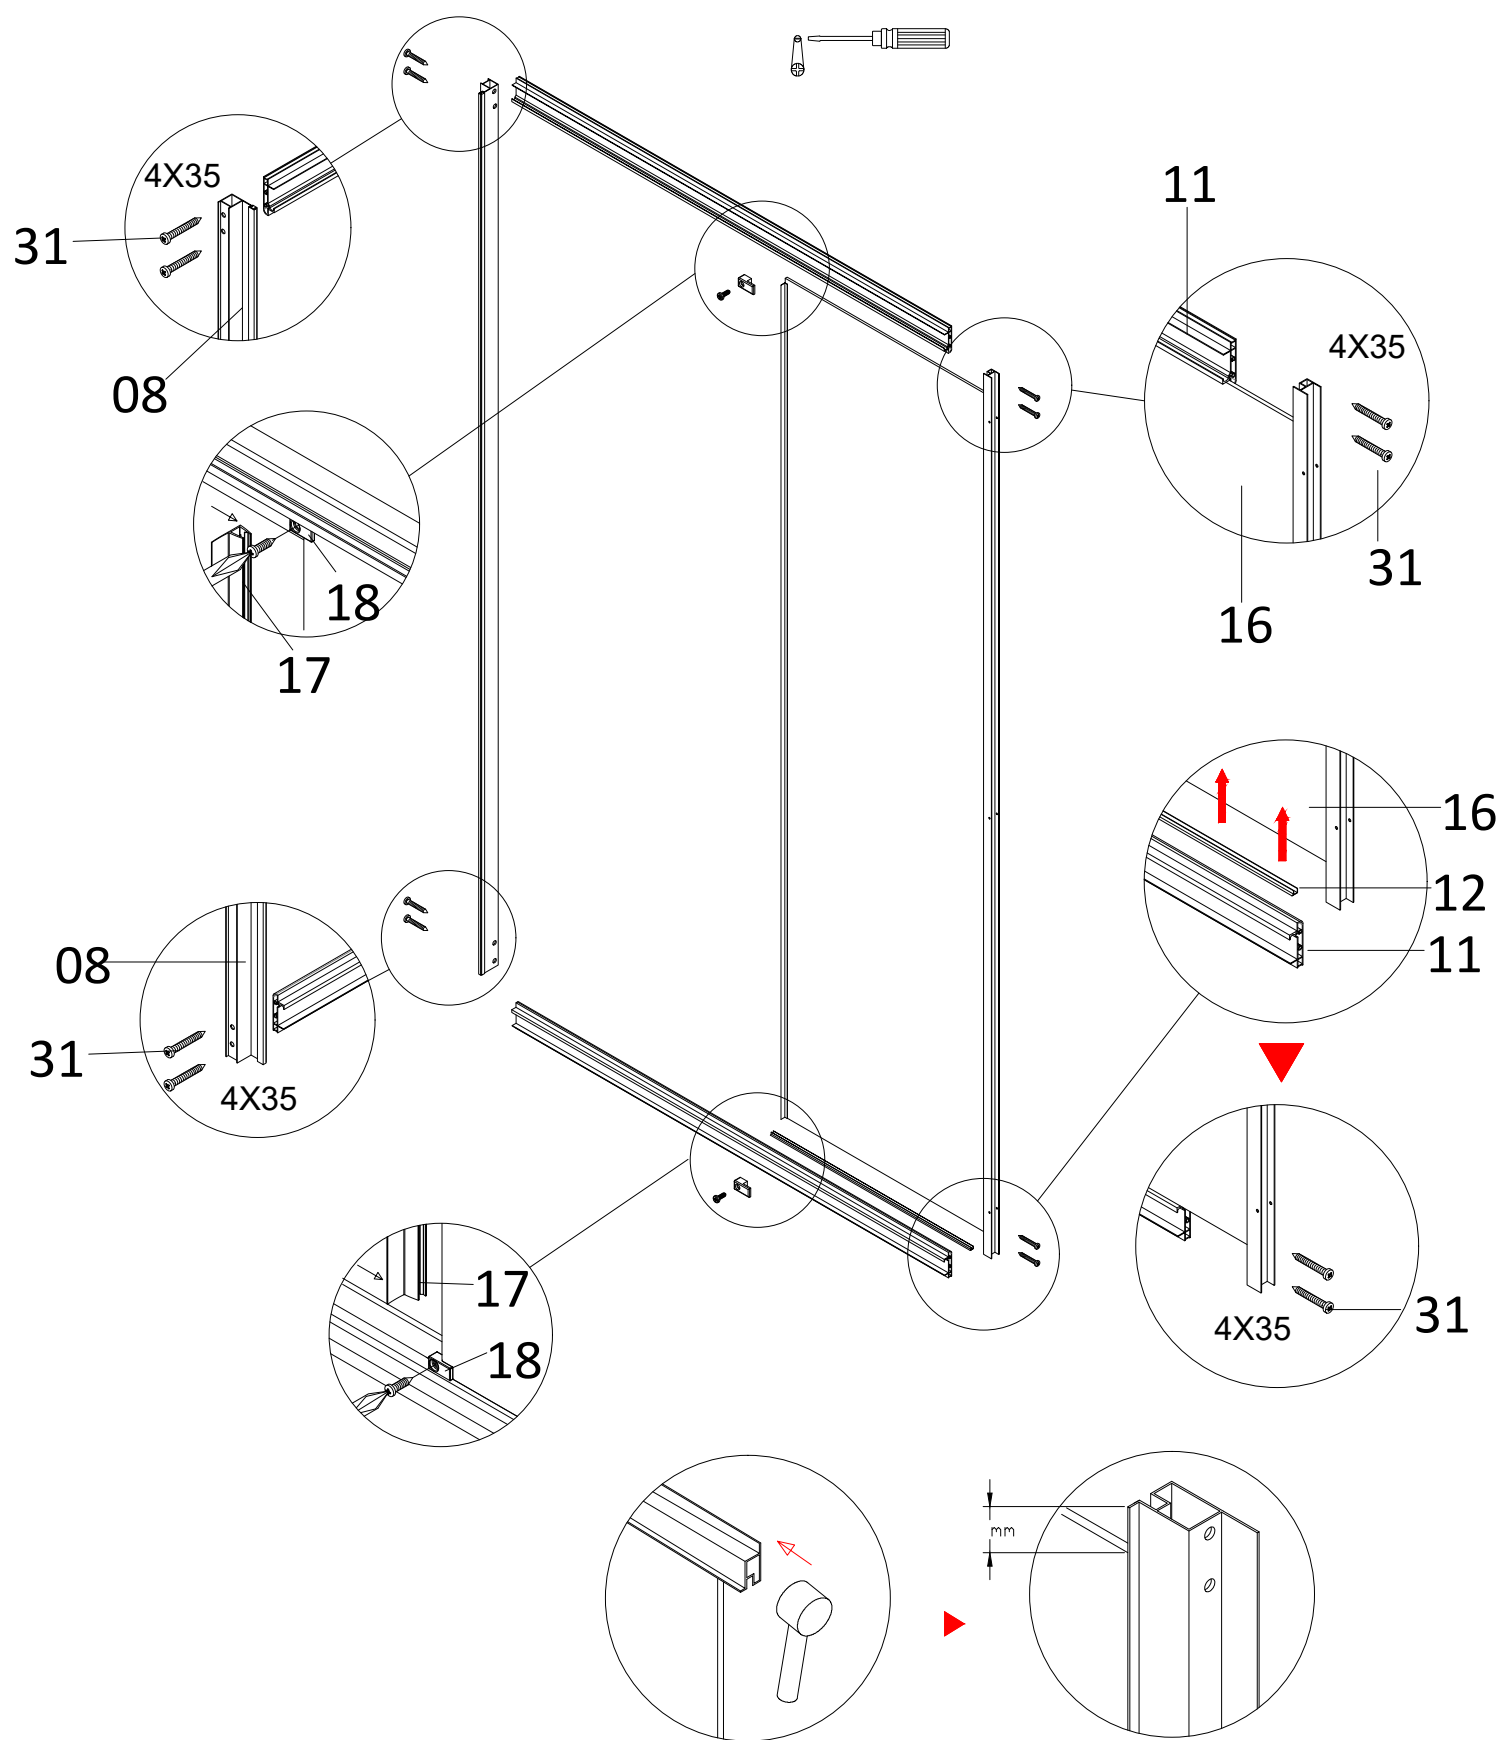 



Kan forskyves under transport

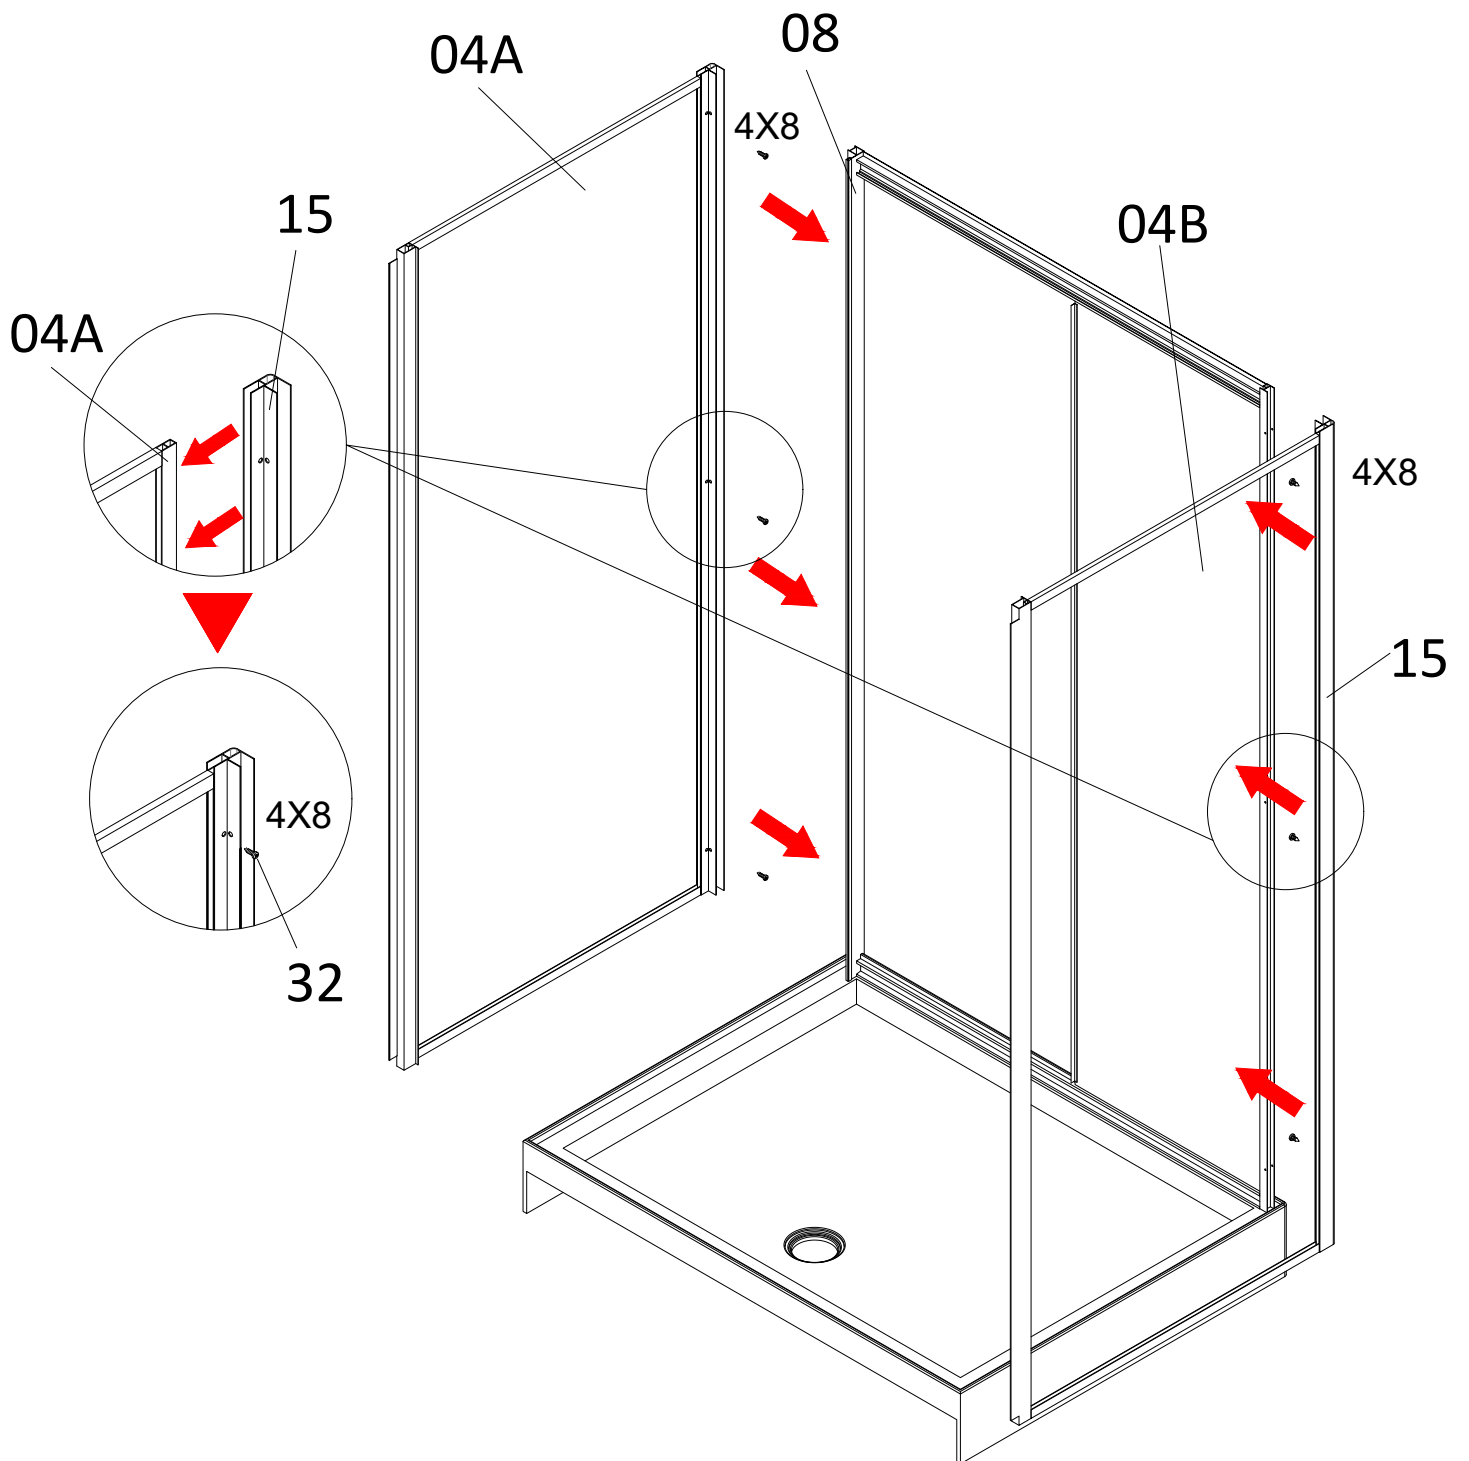  

 

15

  
08

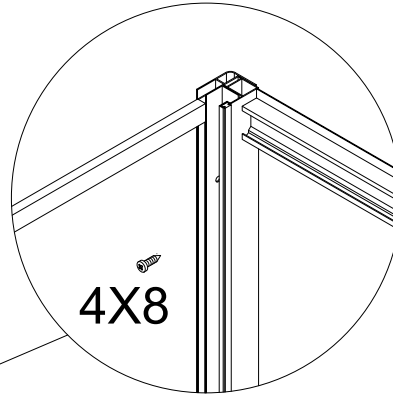
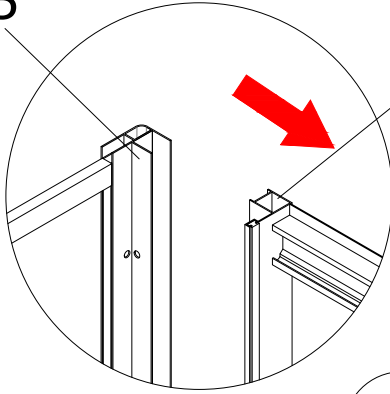


4X8




4X8

   4X8

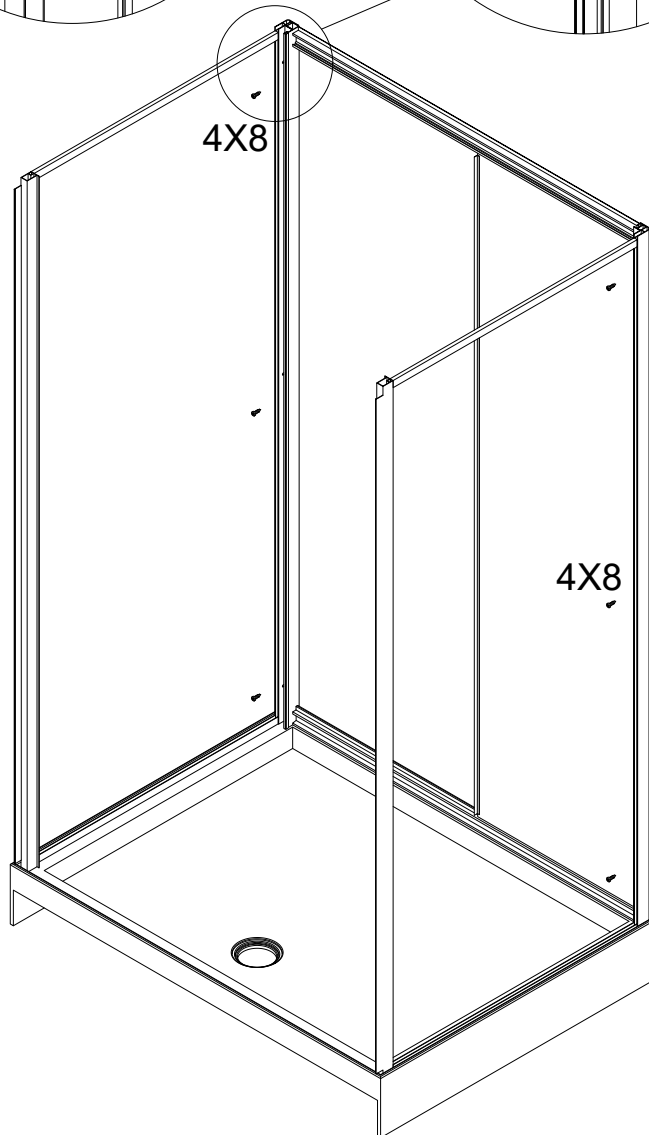

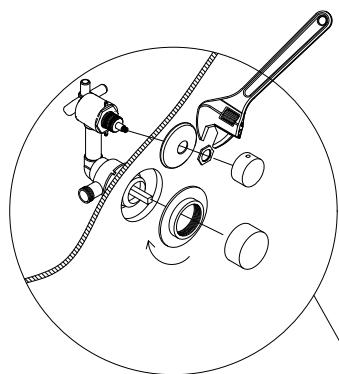

Red

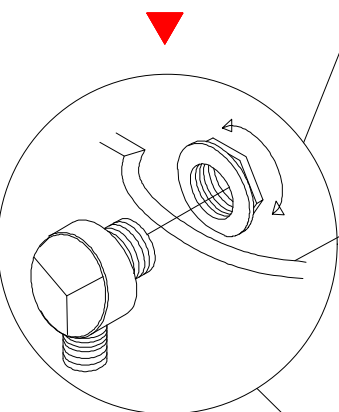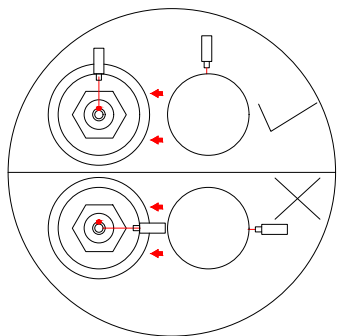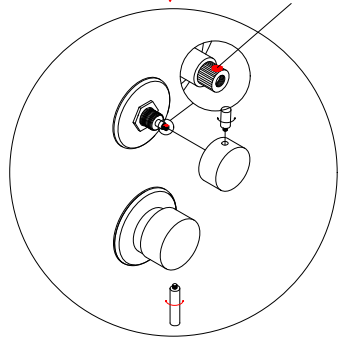   

05

29

33

05

 
 
14

 
 
 
M4x16

M4x16

05

03

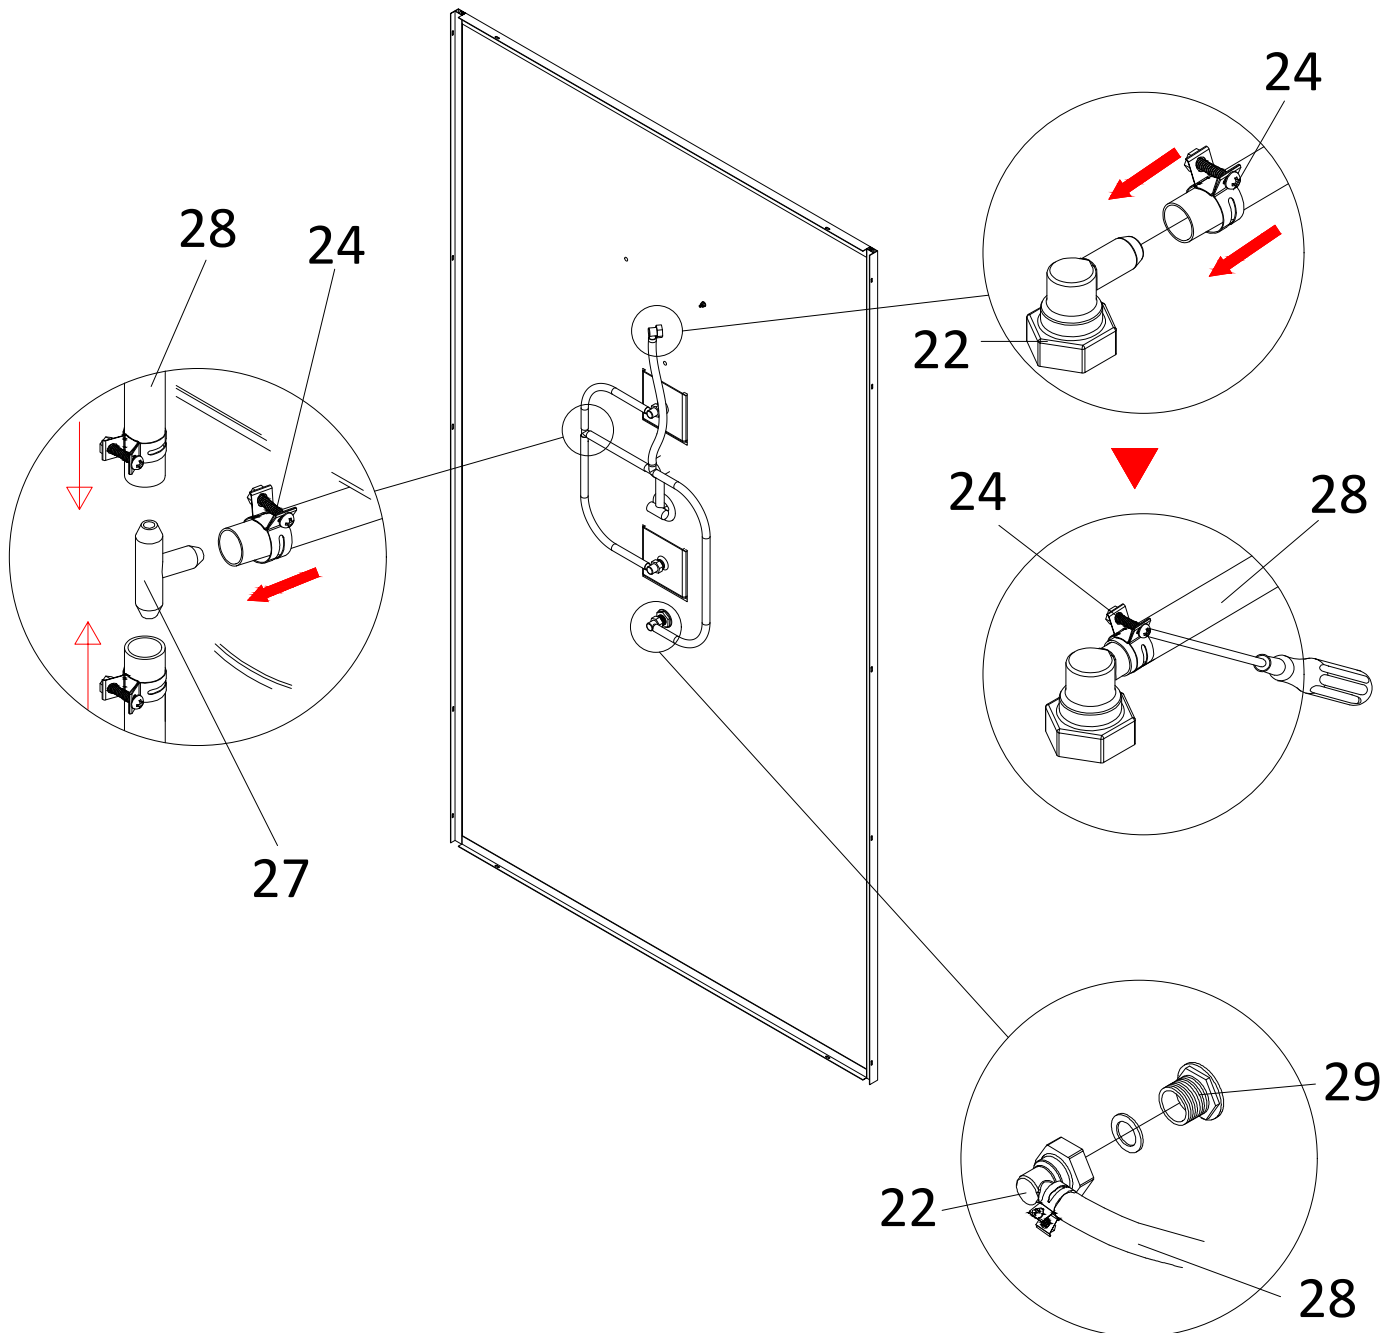

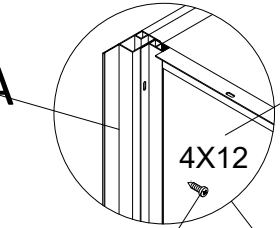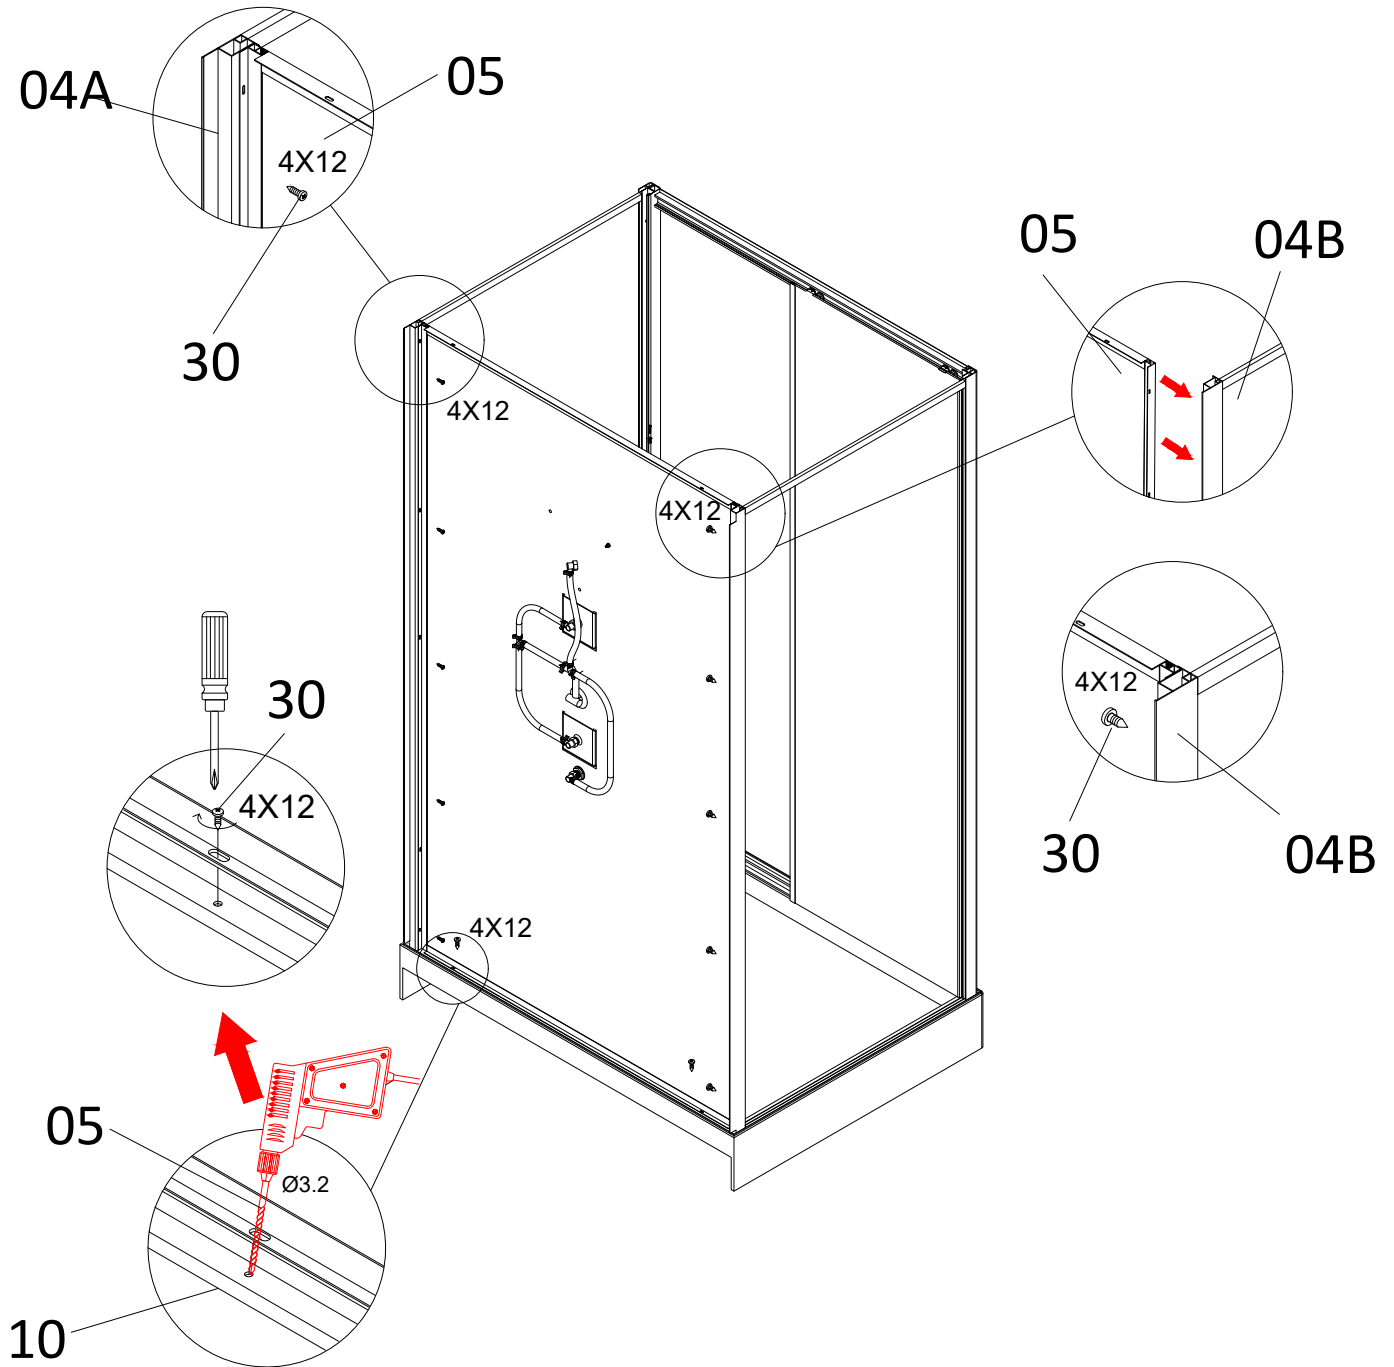

04A

05

4X12

 
30

4X12

4X12


05

04B

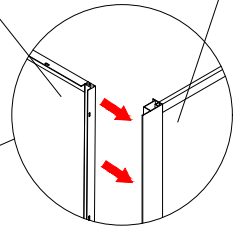


30

 04B

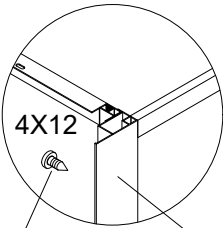

4X12

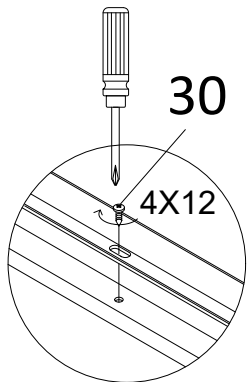 


30

4X12

4X12

05

 10

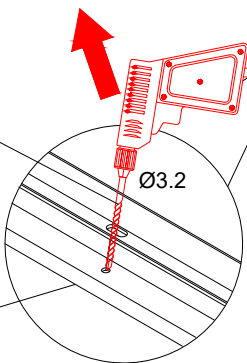

Ø3.2

